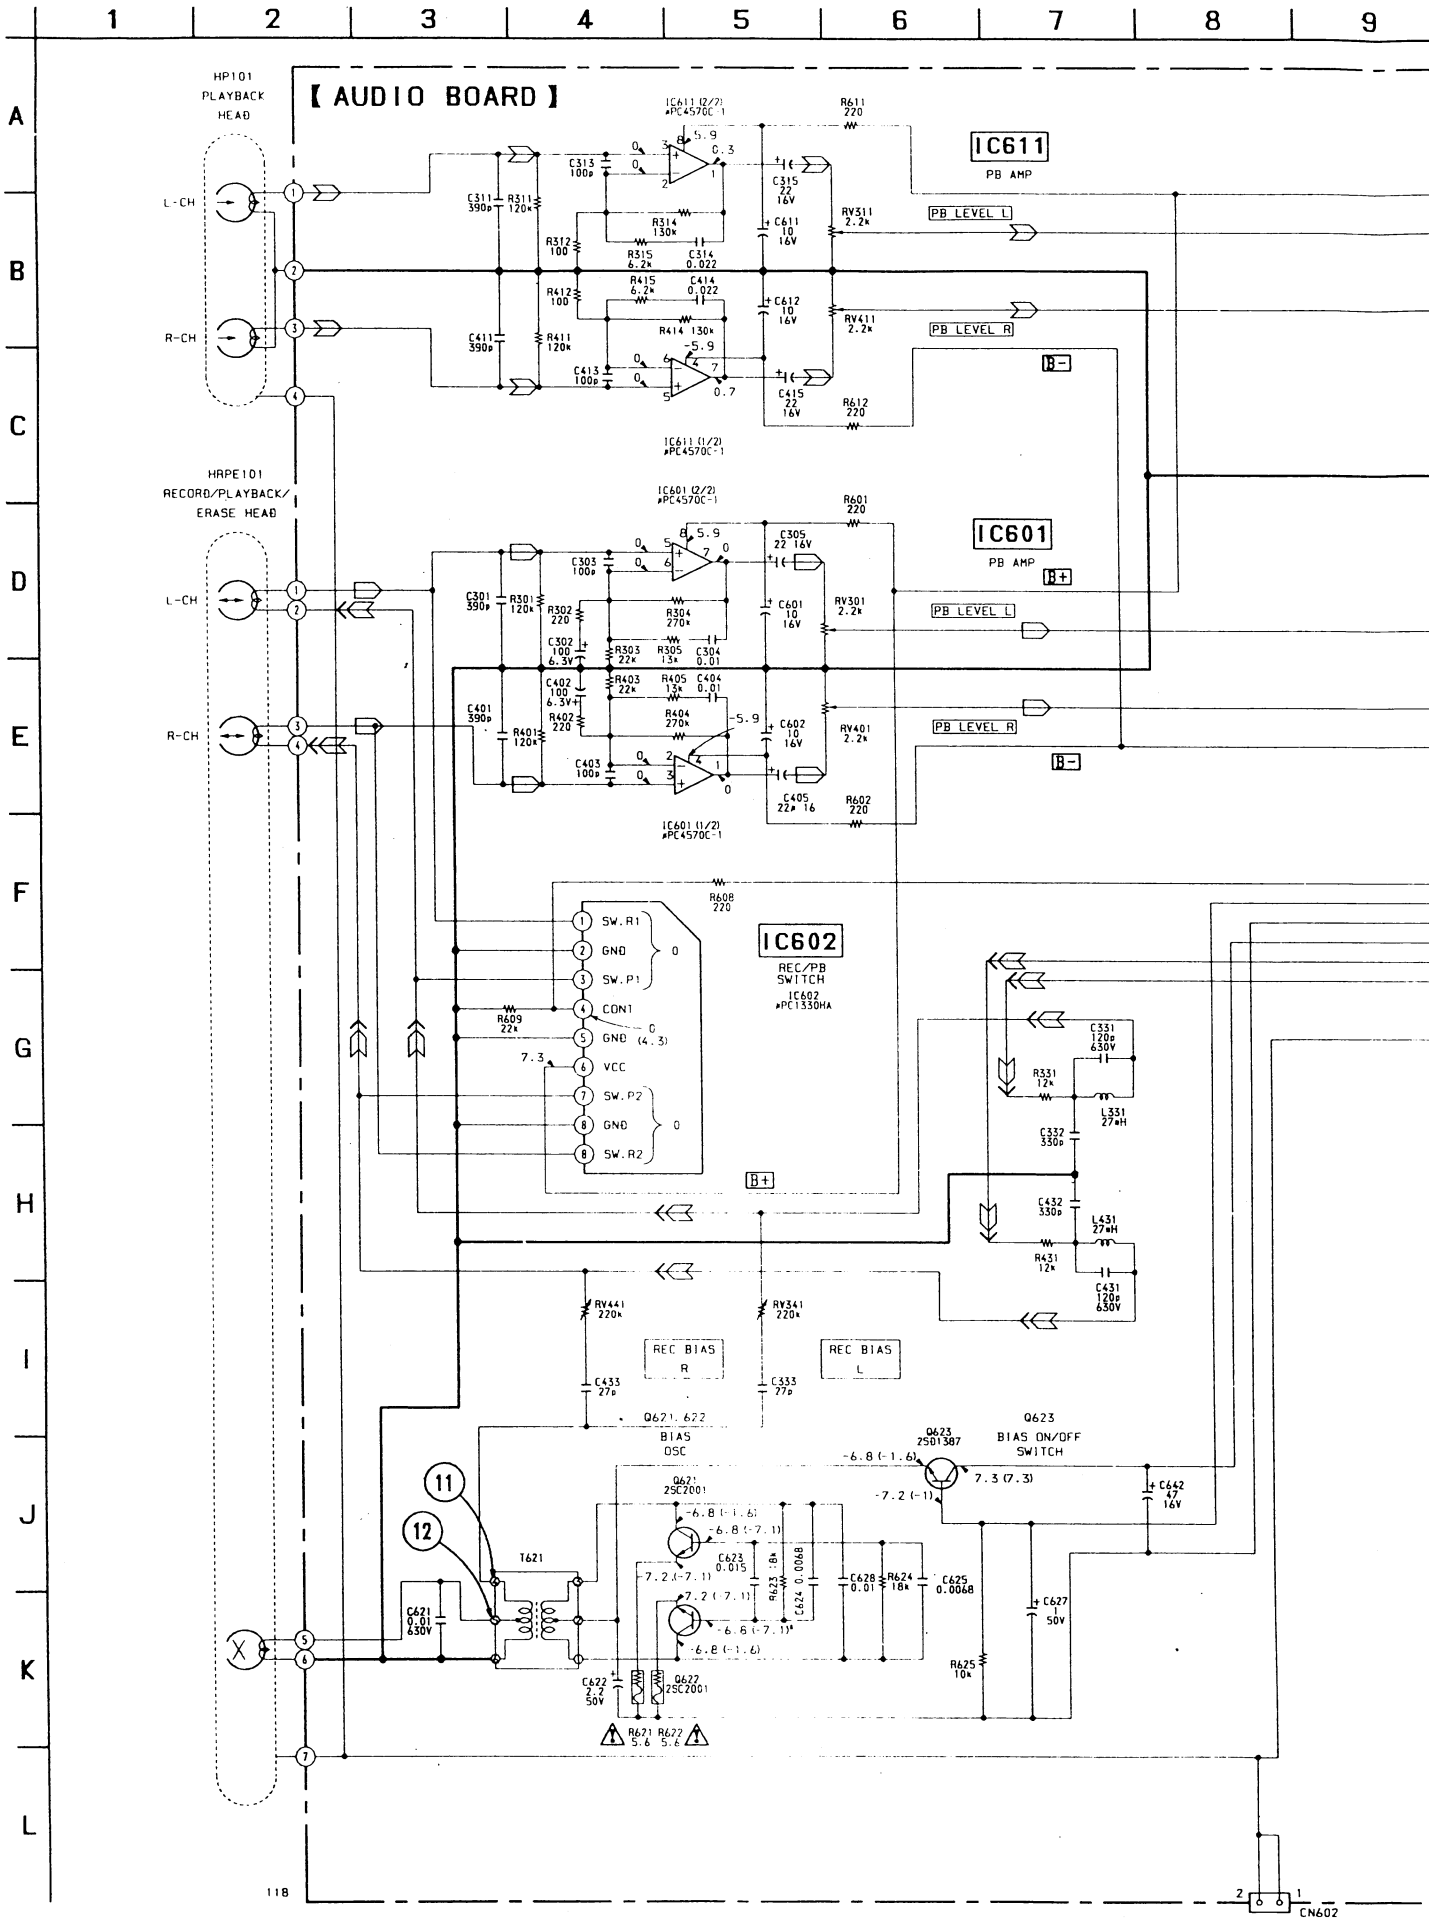
【 AUDIO BOARD 】
HP101
PLAYBACK
HEAD
L-CH
R-CH
HRPE101
RECORD/PLAYBACK/
ERASE HEAD
IC611
PB AMP
IC601
PB AMP
IC602
REC/PB
SWITCH
IC602
μPC1330HA
IC611 (2/2)
μPC4570C-1
IC611 (1/2)
μPC4570C-1
IC601 (2/2)
μPC4570C-1
IC601 (1/2)
μPC4570C-1
PB LEVEL L
PB LEVEL R
B-
B+
SW.R1
GND
SW.P1
CONT
GND
VCC
SW.P2
GND
SW.R2
REC BIAS
R
REC BIAS
L
Q621, 622
BIAS
OSC
Q623
BIAS ON/OFF
SWITCH
2SC2001
2SD1387
T621
CN602